



velo-nom
transporter

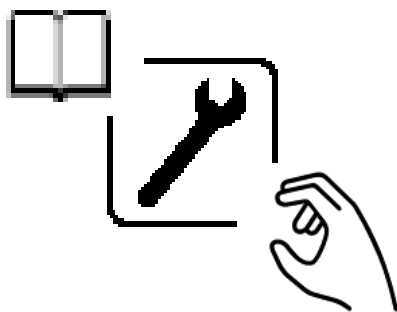

Prana Cargo Bike

Kickstand Assembly Instructions
Ständer Montage Anleitung
Instructions de Montage
Instrucciones de Montaje

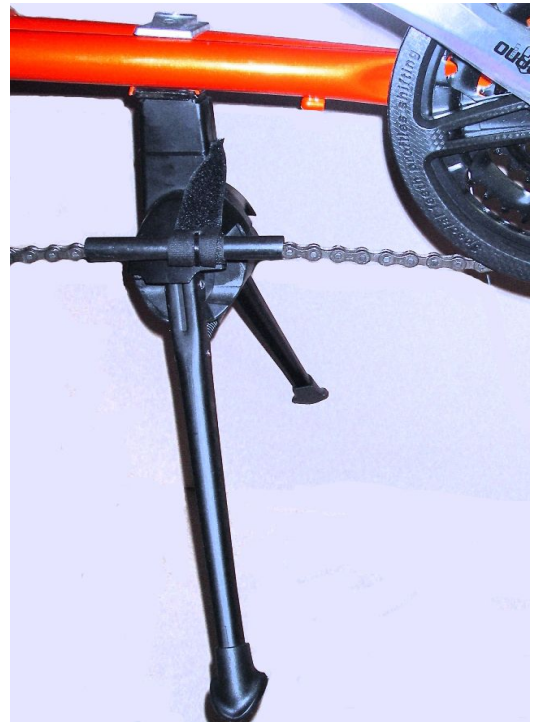

-prana-



1



A

Assembly Group
Bauteile Gruppe

Groupe d'assemblage
Grupo de montaje

1

Part Number
Bauteil Nummer

Numero de part
Numero de elemento

C **4**

Part of Assembly
Group
Bauteil der Baugruppe

Elements a combines
Combinacion de los elementos

3

Assembly Step
Montage-Schritt

Etape de montage
Etapa de montaje

2

Page Number
Seitenzahl

Page
Pagina

Required tools for proper assembly:

!! Not included !!

- Allen keys 6 mm
- side-cutting pliers

Benötigte Werkzeuge für die Montage:

!! Nicht im Lieferumfang !!

- Innensechskant 6 mm
- Seitenschneider

Outils necessaire a l'assemblage:

!! Non inclus !!

- Clefs type Allen 6 mm
- Pince coupante

Herramientas necesarias:

!! Non estan incluidas !!




- Llave Allen 6 mm
- Alicates para cortar



-prana-







2

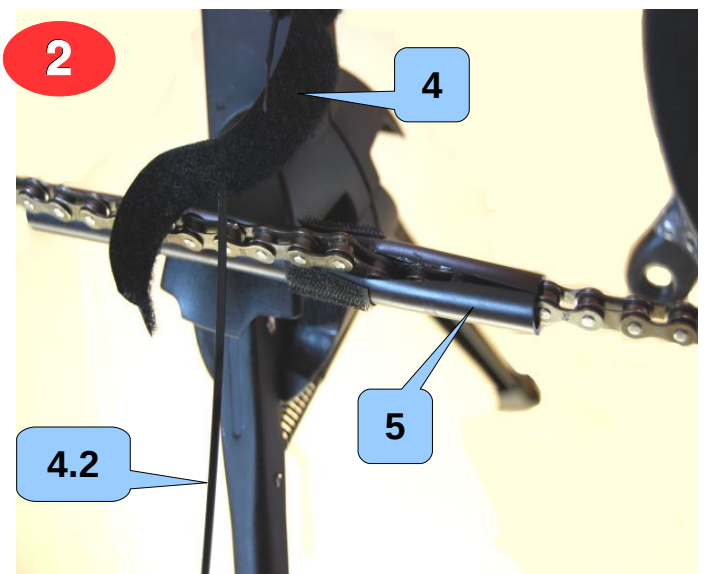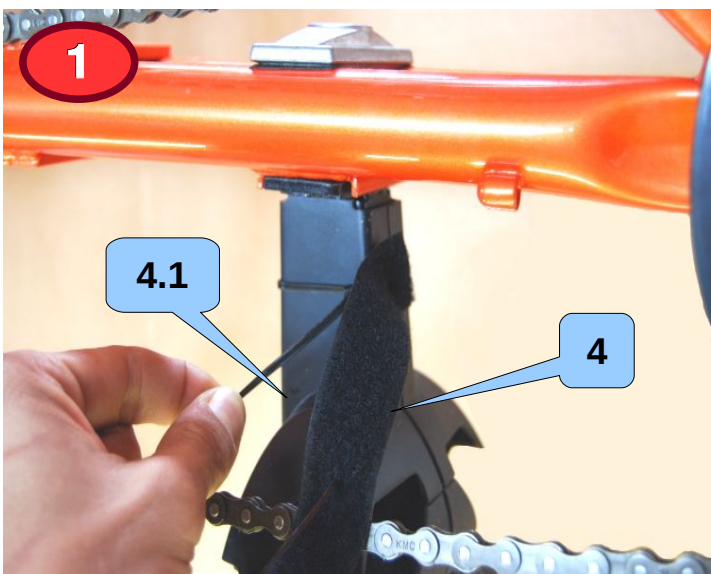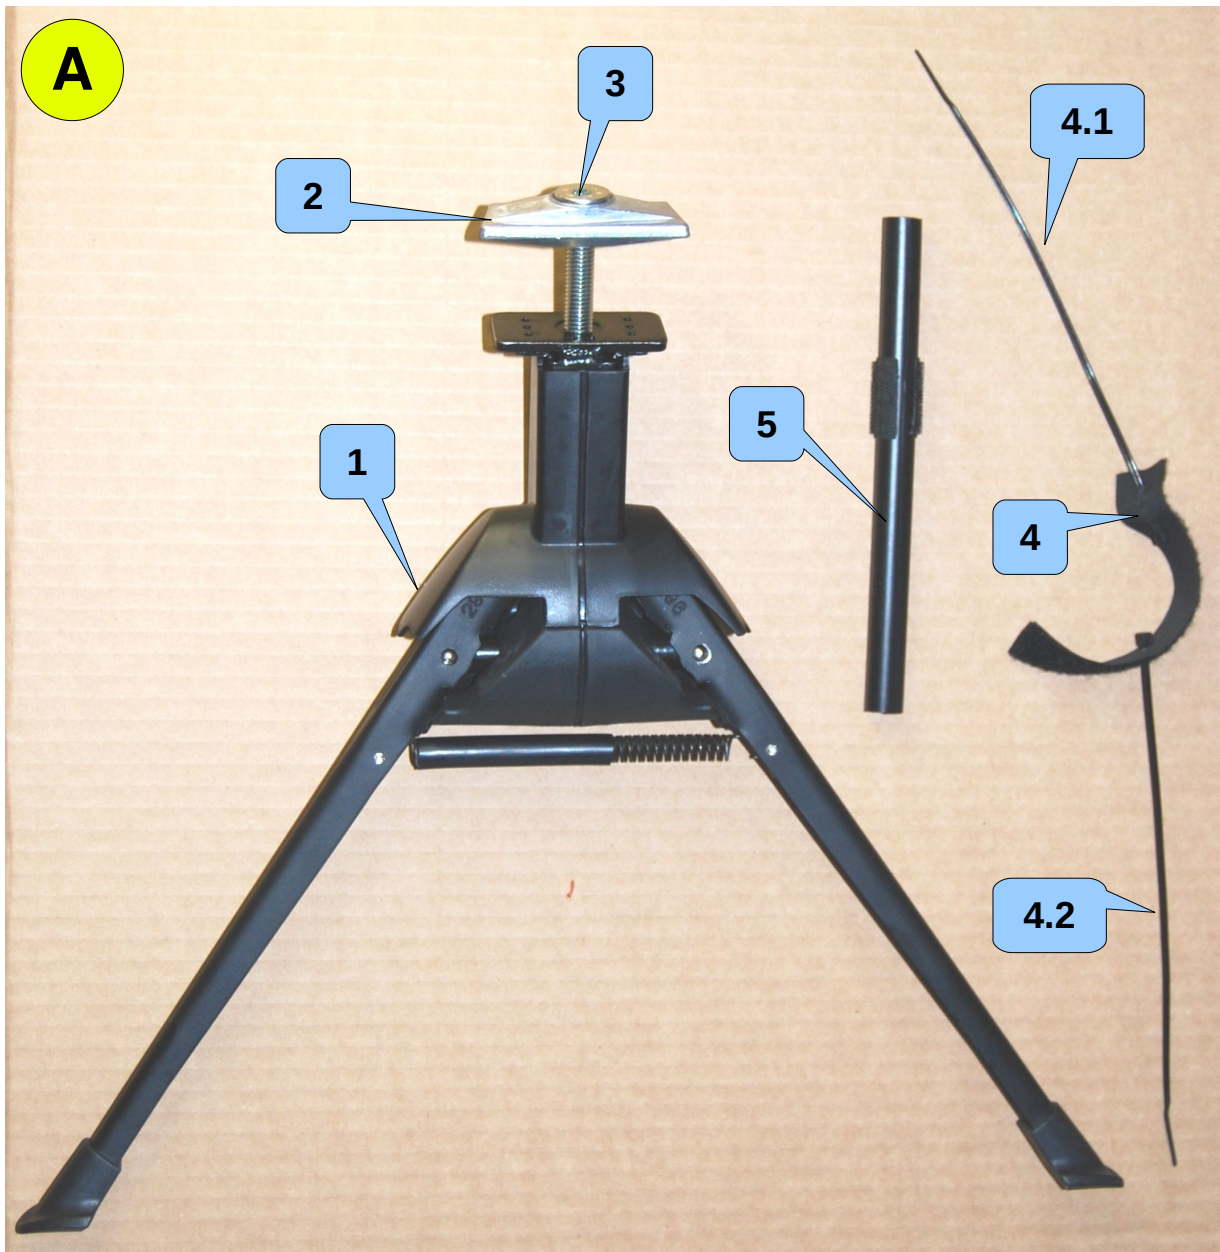

-prana-



3

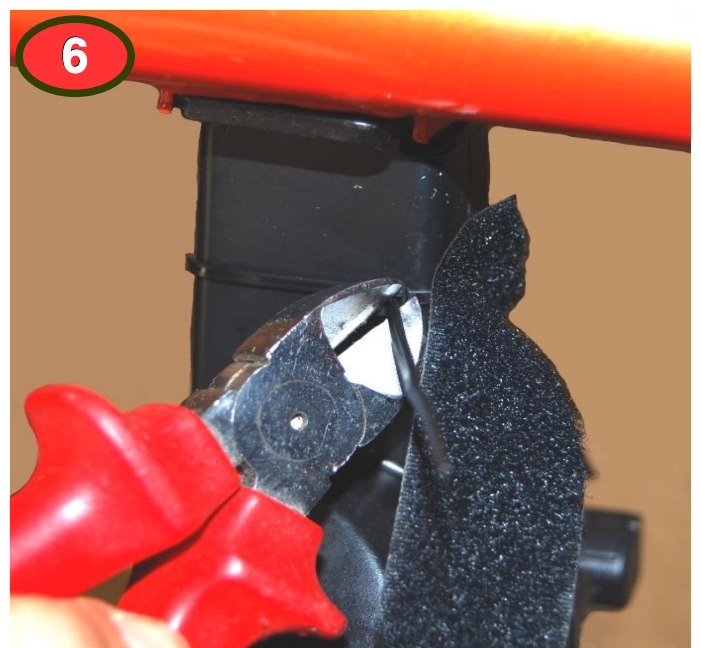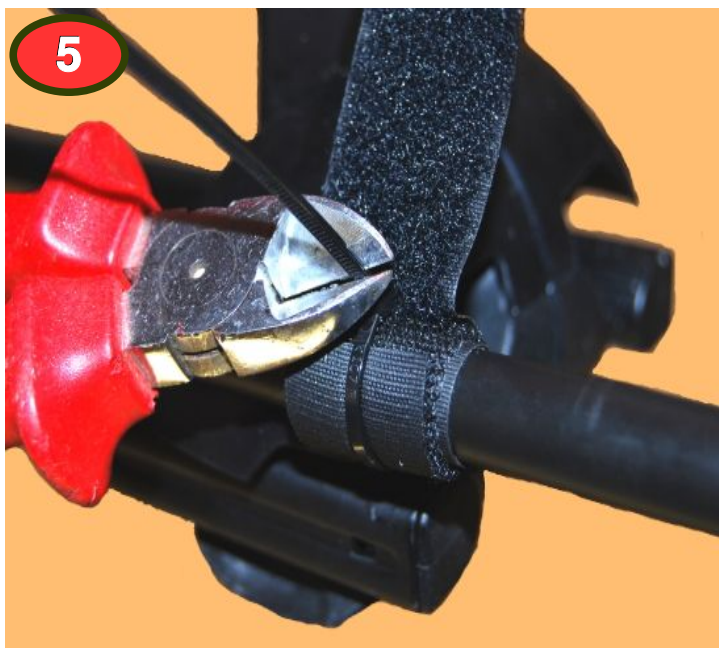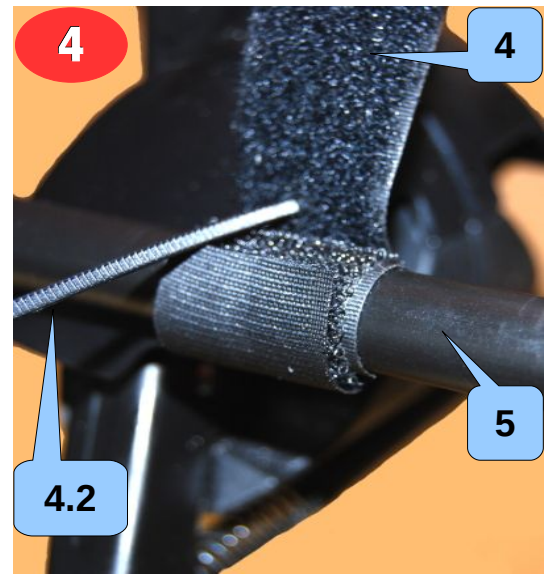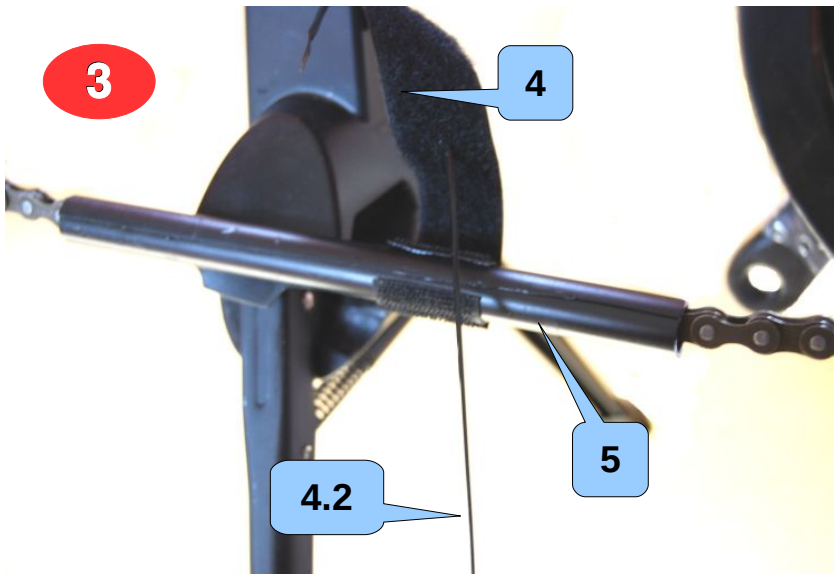

-prana-



4



velo-nom
transporter

Velvet Systems
Klaus Schröder
Rathausstrasse 33
D-51570 Windeck
Tel +49 (0)2292 9580033
info@velonom.com

www.velonom.com



-prana-

5